





- 1.Choose the correct port number
- 2.Click 'Start'




- 3.After the sensor is connected correctly, the following interface will be displayed, click on "Select a calibration point" and select a calibration point in the pop-up window (choose 4.00 and 9.18)

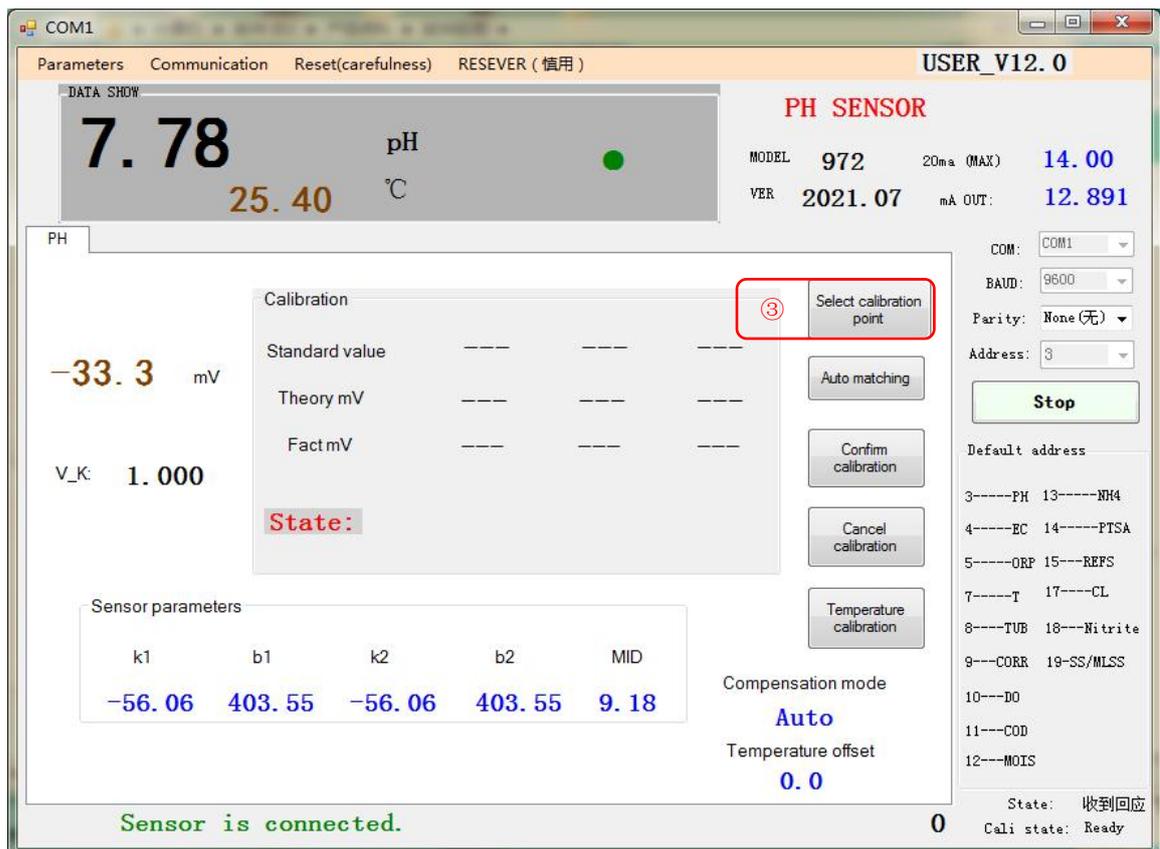

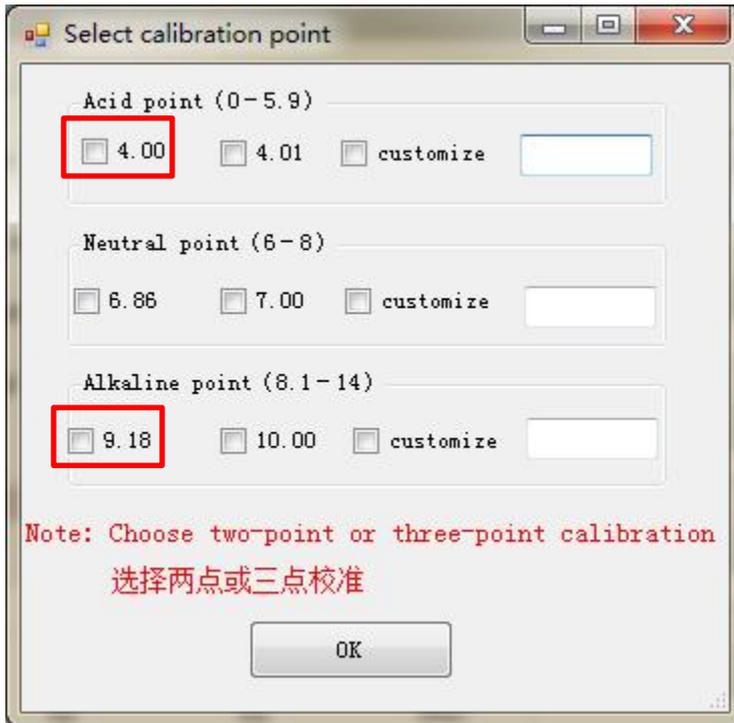

4.First calibrate in a solution with a pH of 4.0. After the data is stable, click 'auto matching', Then clean the sensor probe with water and calibrate in a solution with a pH of 9.18, After the data is stable, click 'auto matching', After the data is stable, click 'auto matching'. Then click 'Confirm calibration'. Click to '确定'in the pop-up window

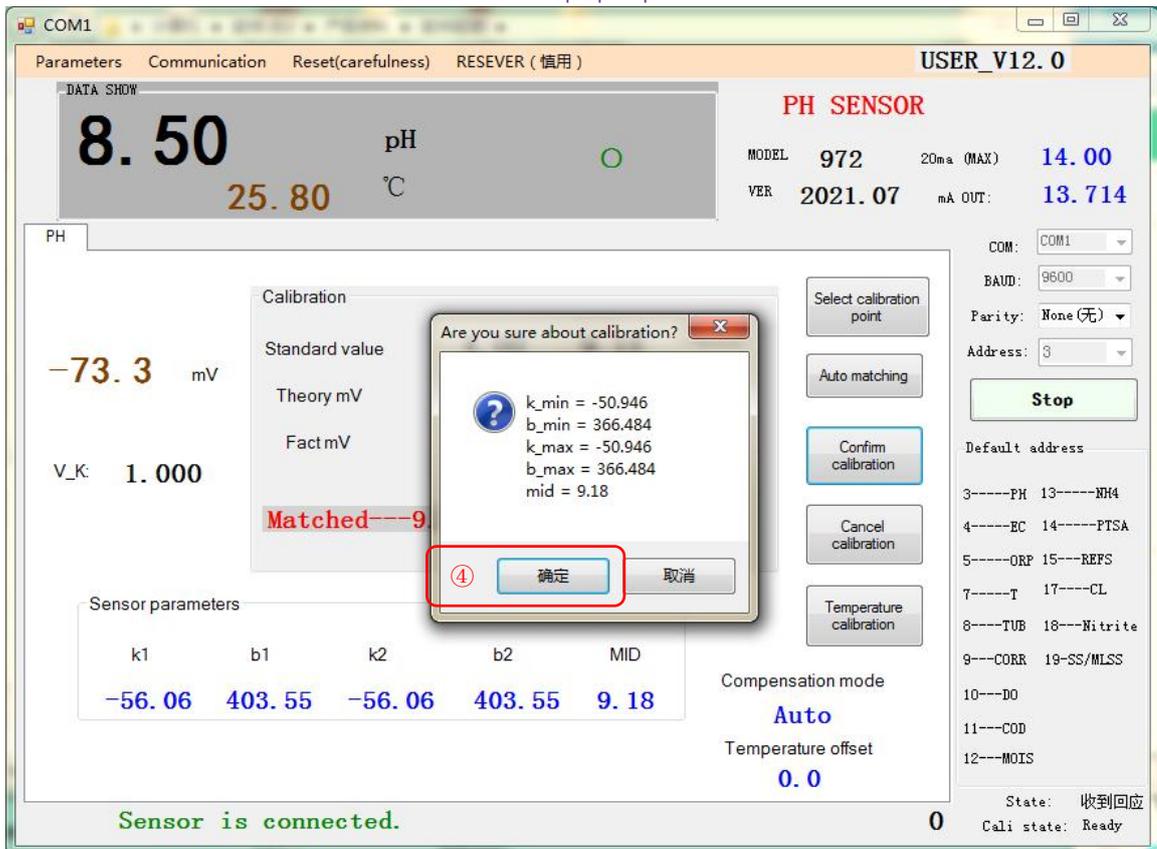

Note: This software is used internally by the factory, please do not click other buttons except for the marked content!